

How to Launch Boot Menu

M3 RED / GREEN - Does not support boot menu

M3 SKY - Turn off M3 SKY by pressing the power button for 10 seconds. Then while pressing the right directional button, turn on the device by pressing the power button.




[MBOOT MENU]

1. Update
 2. Format All
 3. Device ID
 4. Clean Boot - No
 5. Factory Reset
- Enter. Select
0. Exit (Boot)

MBoot v3.1.3_[520Mhz/128MB]

MM3 - Turn off M3 SKY by pressing the power button for 10 seconds. Then while pressing the right directional button, turn on the device by pressing the power button. (Same as M3 SKY)

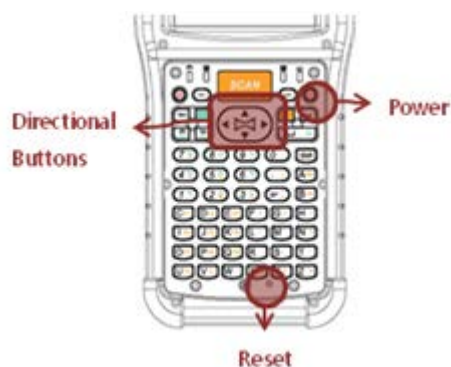

[MBOOT MENU]

1. Update
2. Format All
3. Device ID

4. Clean Boot - No
 5. Factory Reset
 6. Debug Serial - No
- Enter. Select
Exit (Boot)

M3T - Turn off the device by pressing the reset button for approximately 5 seconds. Then press and hold the power button. Then turn on the device by pressing the reset button. The power button must remain pressed. When the screen fires up, release the power button and press it again.



[MC-6700]

1. OS Launch
2. USB Update
3. SD Update
4. Factory Reset
5. EBOOT Config

M3 POS - Turn off the device by pressing the reset button for approximately 5 seconds. Then press and hold the power button. Then turn on the device by pressing the reset button. The power button must remain pressed. When the screen fires up, release the power button and press it again. (Same as M3 T)



M3 POS


1. OS Launch
-

2. Factory Reset
3. USB Update
4. SD Update

Note that if the Boot and OS information are not compatible each other, then you cannot access to Boot menu.

Please refer "[One-click Update](#)" of OS section, if they are different.

M3 ORANGE - Turn off M3 ORANGE by pressing the power button more than 10 seconds. Then press and hold the right navigation button and press the power button briefly.

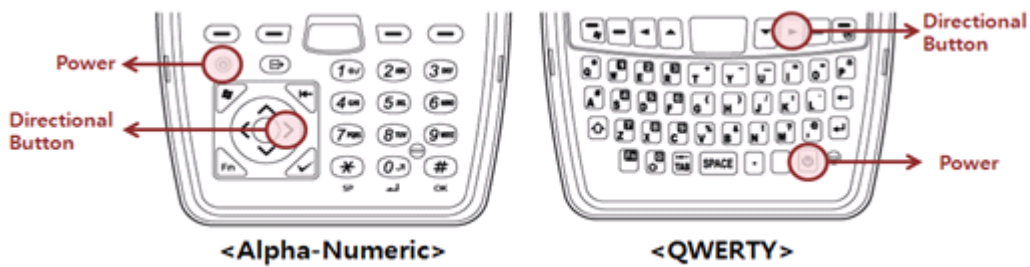

[PBOOT MENU]

1. USB Update
2. SD Update
3. Clean Boot - No
4. Factory Reset - No
5. Debug Msg - No
6. Device ID
0. Exit